


PLC 180 Classroom Technology Tutorial



1. Turn the projector on

- In the upper right-hand corner of the touch panel, press the power button to wake the screen.
- Select **“Projector On”** button on the left-hand side of the screen.

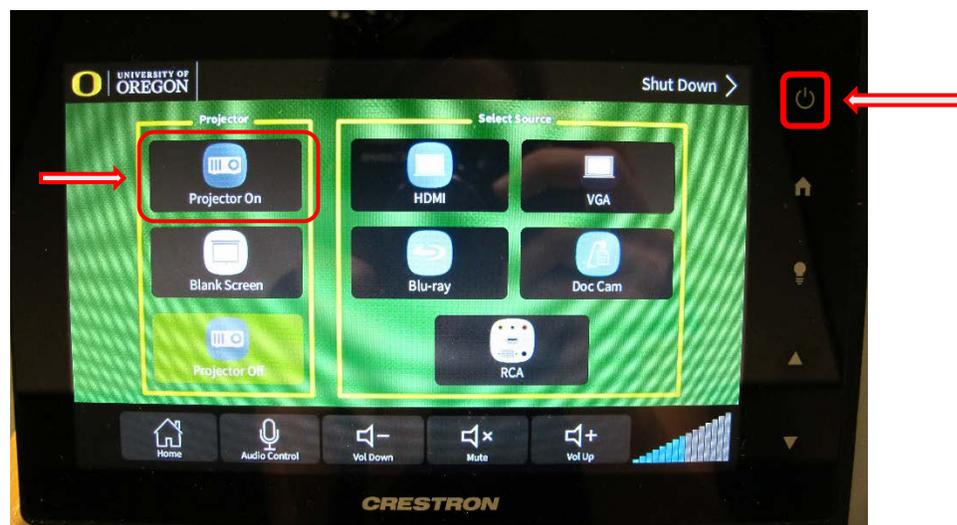

2. Connect your device

- a. Connect your device to the desired cable located to the right of the touch panel. The system supports the following signal inputs: HDMI (audio and video), VGA, Blu-ray, Document Camera, and RCA.
 - i. NOTE: the “Computer” labelled source on the input plate refers to a VGA cable.
 - ii. For some devices (such as Macbooks and tablets), it may be necessary to connect an adapter to either the VGA or HDMI.



3. Select your projection source

- a. To route a source to a specific display, select the icon for the source that you would like to use (HDMI, VGA, Blu-ray, Doc Cam, RCA).



4. Audio

- a. Connect the device’s sound to the classroom system:
 - i. HDMI: If you are using the HDMI cable, the audio is transmitted through the cable, you do not need to connect anything extra. If the audio is not working, please see [troubleshooting tips](#).

- ii. VGA: If you are using the VGA cable, plug the audio cable into the **headphone** input of your device. Increase the volume on the device and the player (Youtube, Window's Media Player) before turning up the classroom volume.

- b. Control the volume by tapping the volume options along the bottom of the screen.




5. Microphone

- a. Locate the microphone in its charging station next the touch panel.




- b. At the bottom of the Crestron touch panel. Select the **“Audio Control”** button to adjust audio levels. “Mic Level” can be adjusted to individually control the microphone’s volume.

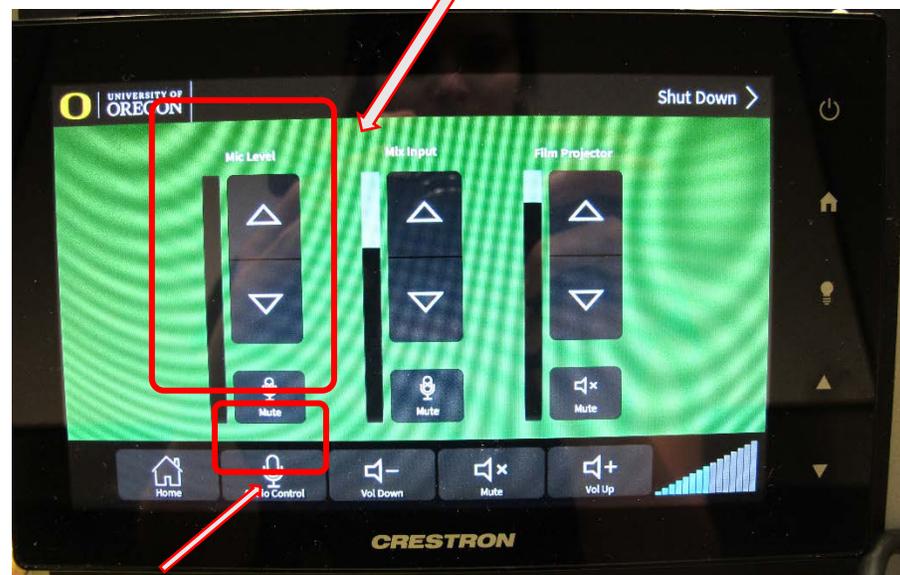

- c. When finished, turn the microphone off, return it to its charging station and press down until it clicks into place.

6. Please turn off the system when finished.

- a. Press the power button on the upper right-hand corner of the touch panel and select “Yes, shut down the system and display now” button.

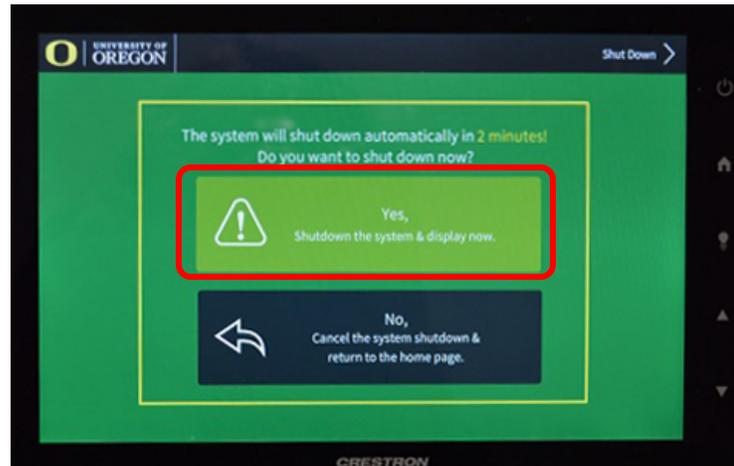


Tips/Troubleshooting

Light Controls – located on the front left-hand side of the podium.

Remote for Blu-Ray – located on top of the podium near the document camera, or inside the top drawer.

A. What if my audio isn't working?

- a. *HDMI users*: If you are connecting the audio through HDMI source and the audio is NOT transmitting to the room system, please follow these steps:
 - i. In the lower right-hand corner of your laptop, right-click on the speaker icon and then select “Playback Devices”

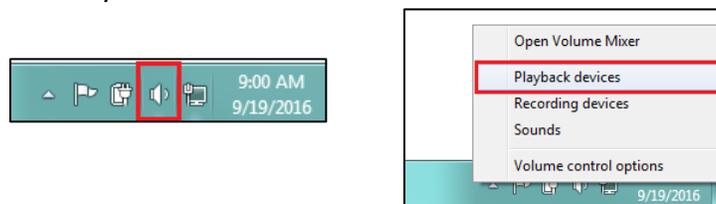

- ii. Next, right-click on the “Crestron” input to enable, you may have to right-click on the “Speakers/Headphones” to disable,

B. The Crestron touch panel is frozen.

- a. Contact CMET immediately so a technician can properly reset the system: **541-346-3091**

Center for Media and Educational Technologies

University of Oregon Libraries

Knight Library, ground floor

<https://library.uoregon.edu/cmet>

cmet@ithelp.uoregon.edu

541-346-3091
